


PLAN VIEW

BOND PORCELAIN PAVER TO THE RAISED QUADRANTS AT EACH CORNER OF THE SPANSAFE STEEL TRAY WITH BEADS OF EITHER CHEMLINK M1 OR 3M550 ADHESIVE.

BEGIN THE DECK INSTALLATION BY LAYING THE FIRST ROW OF PAVER AND TRAY ASSEMBLIES WITH THE CORNERS OF THE TRAYS RESTING ON THE HEADS OF THE INCENDIO PEDESTALS.

LOOSELY INSERT THE STEEL WASHER INTO THE SLOT BETWEEN THE PAVER AND STEEL TRAY WHERE THE CORNERS OF THREE STEEL TRAYS MEET ON THE PEDESTAL HEAD.

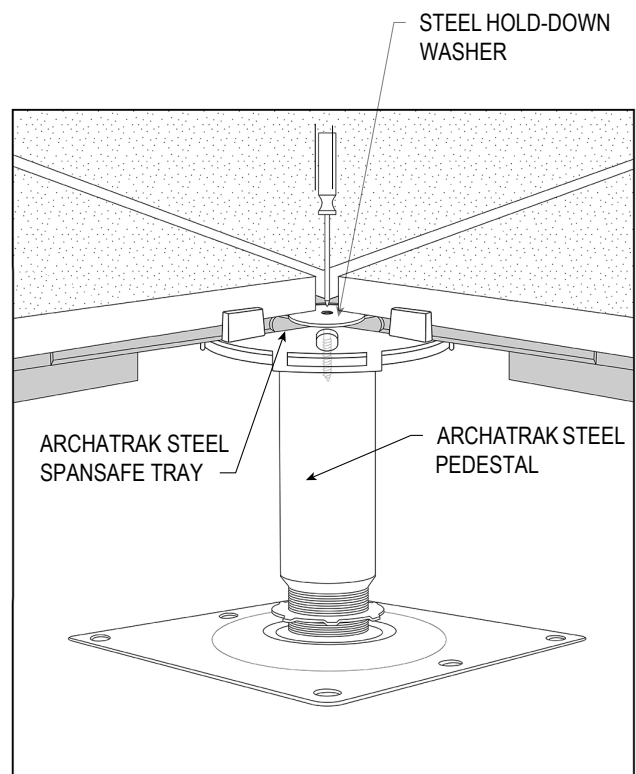


INSTALLATION

AFTER ENSURING THE DECK IS LEVEL AND NO PAVERS ARE ROCKING ON ANY PEDESTAL, INSERT A HEX KEY INTO THE GAP WHERE 4 PAVERS MEET AND TIGHTLY SECURE THE STEEL TRAYS TO THE PEDESTAL HEADS.

GENERAL NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH ARCHATRAK SPECIFICATIONS.
2. DO NOT SCALE DRAWING.
3. THIS DRAWING IS INTENDED FOR USE BY ARCHITECTS, ENGINEERS, CONTRACTORS, CONSULTANTS AND DESIGN PROFESSIONALS FOR PLANNING PURPOSES ONLY AND SHOULD NOT BE USED FOR CONSTRUCTION.
4. ALL INFORMATION CONTAINED HEREIN WAS CURRENT AT THE TIME OF DEVELOPMENT BUT MUST BE REVIEWED AND APPROVED BY ARCHATRAK TO BE CONSIDERED ACCURATE.

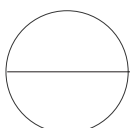

## T20 PORCELAIN PAVERS: LOCK DOWN SYSTEM

PORCELAIN PAVER LOCK DOWN SYSTEM FOR WIND UPLIFT MITIGATION