


PERSPECTIVE
STAINLESS STEEL
SCREW AND WASHER

INSERT THE SCREW AND WASHER ASSEMBLY INTO THE HEAD OF THE PEDESTAL AND TURN WITH A SCREWDRIVER UNTIL THE WASHER IS THE CORRECT HEIGHT TO SLOT INTO THE KERF CUT INTO THE EDGES OF THE WOOD TILES. PLACE THE WOOD TILES ON THE HEAD OF THE PEDESTAL, ENSURING THAT THE WASHER CATCHES THE CORNER OF ALL FOUR TILES. TIGHTEN THE SCREW FROM THE TOP UNTIL THE TILES ARE SECURELY FASTENED TO THE PEDESTAL. DO NOT OVER TIGHTEN THEM.

WOOD PAVERS

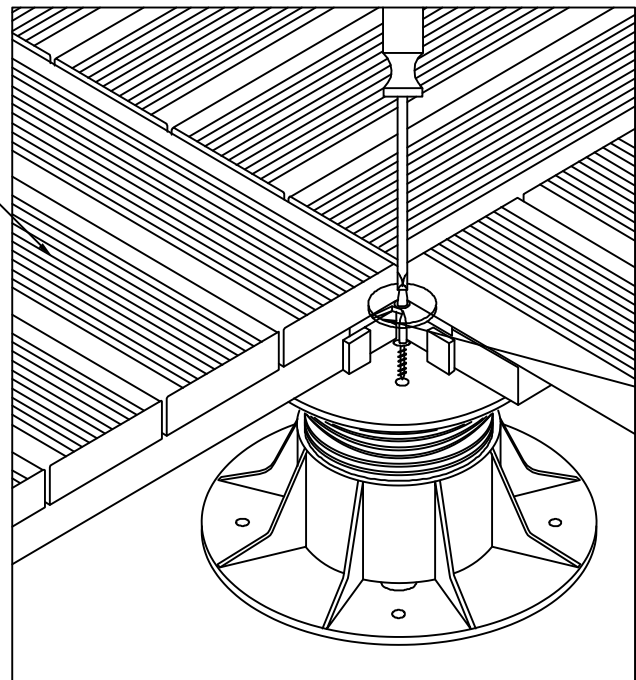

KERF
CUT


INSTALLATION

MANUFACTURER NOTES:

1. PLEASE CONTACT MANUFACTURER FOR COLOR OPTIONS.

NOTES:

1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
2. DO NOT SCALE DRAWING.
3. THIS DRAWING IS INTENDED FOR USE BY ARCHITECTS, ENGINEERS, CONTRACTORS, CONSULTANTS AND DESIGN PROFESSIONALS FOR PLANNING PURPOSES ONLY. THIS DRAWING MAY NOT BE USED FOR CONSTRUCTION.
4. ALL INFORMATION CONTAINED HEREIN WAS CURRENT AT THE TIME OF DEVELOPMENT BUT MUST BE REVIEWED AND APPROVED BY THE PRODUCT MANUFACTURER TO BE CONSIDERED ACCURATE.
5. CONTRACTOR'S NOTE: FOR PRODUCT AND COMPANY INFORMATION VISIT www.CADdetails.com/info AND ENTER REFERENCE NUMBER 4879-024.

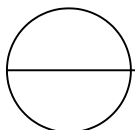

STRUCTURAL WOOD DECK TILES

HOLD DOWN SCREWS FOR WOOD TILES